


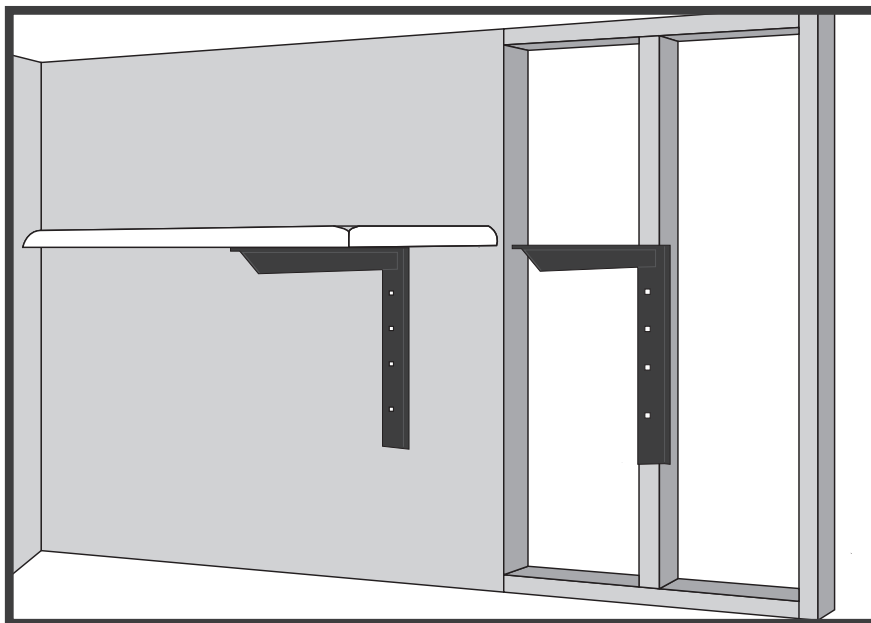

HYBRID BRACKET INSTALL

Hybrid Bracket Surface Mount Install

1. Select the appropriate size bracket for your counter surface. The overhang should be maximum of 6" longer than the bracket and a minimum of 3" to reduce visibility.
2. Locate the wall studs and hold the bracket directly over stud at the desired height.
(Brackets must be installed into wall studs. Drywall anchors should not be used.)
3. Mark on the wall the locations of the holes to be drilled, set the bracket aside.
4. Drill 3/16" pilot holes on the marked locations. Place bracket back into position and secure with 1/4" lag bolts.
5. Check for level and shim if necessary. Use included plastic caps to cover screw holes.
6. Repeat for additional brackets. Brackets should be placed every 16 to 24" for optimum performance.
7. Apply a silicone sealant to the top of the brackets to secure the counter surface to the brackets.



A&M

HARDWARE, INC.

Call To Order (888) 647-0200

1165 Strickler Road, Mount Joy, PA 17552 | Fax: (717) 653-5874

www.AandMhardware.com